

Product Selection

2

PD1-Frame

**PD1-Frame Ground Fault Modules,
UL/CSA-Rated (Bottom Mounted,
120–480 Vac, 50/60 Hz) ①**

Ampere Rating	Number of Poles	Catalog Number
125	3	ELEBN3125G
	4	ELEBN4125G

**PD1-Frame Earth Leakage Modules,
IEC-Rated (Bottom Mounted,
230–415 Vac, 50/60 Hz) ①**

Ampere Rating	Number of Poles	Catalog Number
125	3	ELEBE3125G
	4	ELEBE4125G

PD2-Frame

**PD2-Frame Ground Fault Modules,
UL/CSA-Rated (Bottom Mounted,
120–480 Vac, 50/60 Hz) ②**

Ampere Rating	Number of Poles	Catalog Number
225	3	PDG2XRCD3P225
	4	PDG2XRCD4P225

PD3-Frame

**PD3-Frame Ground Fault Modules,
UL/CSA-Rated (Bottom Mounted,
120–480 Vac, 50/60 Hz)**

Ampere Rating	Number of Poles	Catalog Number
400	3	PDG3XRCD3P400
	4	PDG3XRCD4P400
600	3	PDG3XRCD3P600
	4	PDG3XRCD4P600

**PD3-Frame Earth Leakage Modules,
IEC-Rated (Bottom Mounted,
230–415 Vac, 50/60 Hz)**

Ampere Rating	Number of Poles	Catalog Number
630	3	PDE3XRCD3P630
	4	PDE3XRCD4P630

**PD3-Frame Earth Leakage Modules,
IEC/CCC-Rated (Bottom Mounted,
230–415 Vac, 50/60 Hz)**

Ampere Rating	Number of Poles	Catalog Number
630	3	PDC3XRCD3P630
	4	PDC3XRCD4P630

Notes

- ① Shunt trip and undervoltage release cannot be used in a PD1 breaker connected to an earth leakage module.
- ② Includes shunt trip to reset breaker