

LED Wall Pack Installation Instructions

APPLICATIONS:


Tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.

CAUTIONS:


1. Do not use any electric generator to test the LED light.
2. Please abide by related country, regional and local law and regulations when installing this light.
3. Do not install the light in rain to avoid electrical shock or damage.

Notes:

1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
2. Please wear gloves to avoid injury before installation.
3. If at some point during or after installation you should notice smoke or fire coming from the light, turn the power off immediately and notify an electrician.
4. This light is available for outdoor use. The recommended minimum distance for the light to the ground is 2 meters.

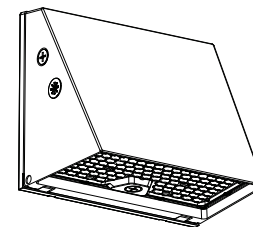


5P60

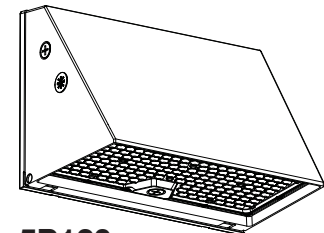


5P120


Installation:

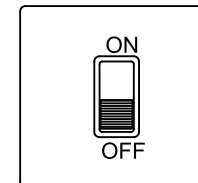


1. Turn power OFF

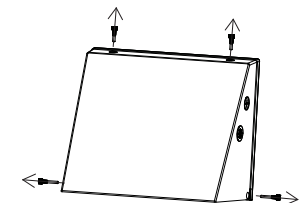


2. Loosen and remove the screws

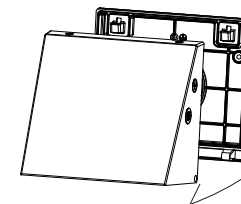


3. Open the light, and remove the upper cover from the light

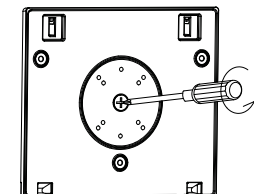


4. Remove the plug and attach an EVA cotton pad

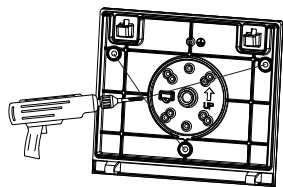


5.1.1. Drill through the mounting hole with an electric drill

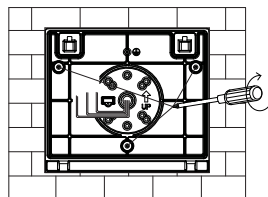


5.1.2. Lock the bottom shell on the mounting seat with screws

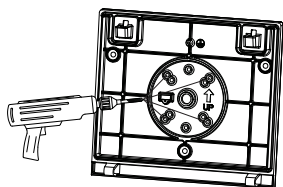


5.2.1. Drill through the mounting hole with an electric drill

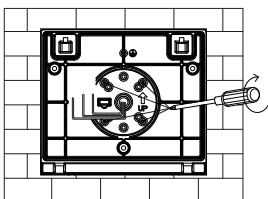


5.2.2. Lock the bottom shell on the mounting seat with screws

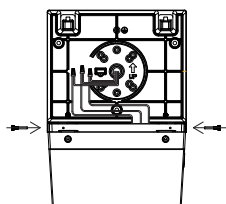

6. Fasten the screws and connect the L, N and G wires to the power supply

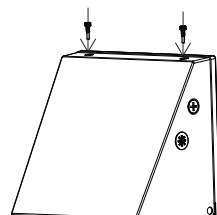

7. Mount the cover back and fix it with screws. Caulk the mounting surface.

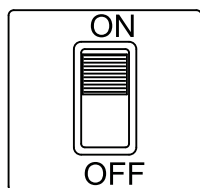

8. Make sure the installation is complete before turning power back on

STANDARD WIRE:

L/live wire: Black/Brown; N/Null wire: White/Blue; Ground wire: Green/Yellow-green
WARNING: During grounding, make sure the earth wire of the driver and light housing are connected together with the earth wire of the local power supply

SPECIAL FUNCTION INSTRUCTIONS

 


Fig. 1

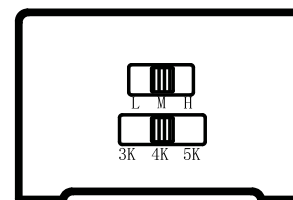


Fig. 2

PHOTOCELL:

Connection of male and female connector will help to turn on the photocell (Fig. 1)

Disconnection of male and female connector will help to turn off the photocell. (Fig. 2)



COLOR TEMPERATURE ADJUSTABLE INSTRUCTIONS:

1. The color temperature of the light turns to 3000K with the DIP switch is set to 3K
2. The color temperature of the light turns to 4000K with the DIP switch is set to 4K
3. The color temperature of the light turns to 5000K with the DIP switch is set to 5K

Note: Please turn off the power before adjusting the color temperature.

Wattage adjustable instructions

The power of the lamp will change to the corresponding wattage when the DIP switch is set to L/M/H

Adjustable wattage range: 25%-100%

NOTE: Please turn off the power before adjusting the wattage.