





Multiple Gang Recessed TV BOX™ **New!** for Power and Low Voltage

For new or existing construction. Non-metallic, recessed combo boxes for power *and* low voltage for class 2 wiring of satellite or cable TV, speakers, etc.

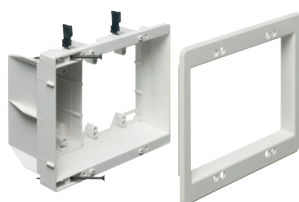

TVBU507

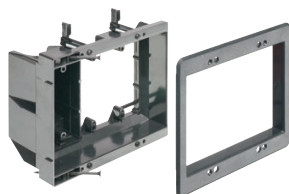

TVBU507BL

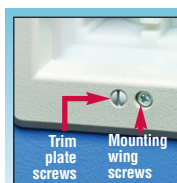


Photo B - Screws

Features and Benefits


- Recessed combo box allows you to mount LCD/plasma TVs and other system components flush against the wall
- For new work...Use supplied screws to install on stud. For convenience, box positioning tabs are set for 1/2" or 5/8" drywall
- Trim plate is textured/paintable and covers edges of cut wall surface
- Mounting wings hold bracket securely against wall when screws are tightened
- For walls up to 1-1/2" thick
- Use with Arlington's SCOOP™ series entrance hoods and plates (see pages L-9 to L-11)

CATALOG NUMBER	UPC/DCI/NAED MFG #01 8997	DESCRIPTION	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
TVBU505*	09680	2-Gang, White, (1) Power / (1) LV	1	4	6.942	6.254	3.750
TVBU505BL*	09681	2-Gang, Black, (1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBR505K*	09682	Kit, 2-Gang, White, (1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBU507	09661	3-Gang, White, (1) Power/ (2) LV	1	4	7.930	6.818	3.875
TVBU507BL	09662	3-Gang, Black, (1) Power/ (2) LV	1	4	7.930	6.818	3.875


Add suffix "GC" to Catalog # when ordering in Canada, for example TVBU505GC.

*Optional box covers available on page N-12.

PATENTED. ADDITIONAL PATENTS PENDING.

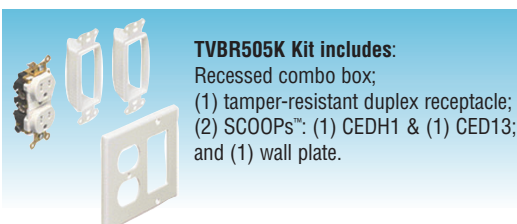

TVBR505K Kit includes:
Recessed combo box;
(1) tamper-resistant duplex receptacle;
(2) SCOOPs™: (1) CEDH1 & (1) CED13;
and (1) wall plate.

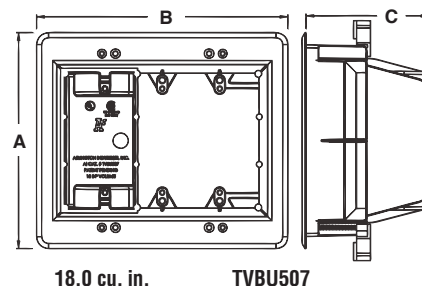

Includes...

Recessed combo box; (1) trim plate; (1) decorator style cover plate; and installation screws.

Installation Instructions - New Work (TVBU507 shown)

For a video installation demonstration visit our website @ aifittings.com



Attach box to stud. Use tabs for proper positioning of box depth. See 2.



Positioning tabs are set for 1/2" or 5/8" drywall.



Attach paintable trim plate with screws provided. See Photo B.




Tighten mounting wing screws to pull the box securely against the wall board. See Photo B.


Retrofit Work (TVBU507 shown)



Using box, without trim plate as a template, mark location. Cut hole.

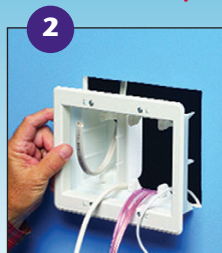

Attach trim plate to box. See Photo B. Pull wire/cables. Install box assembly in opening.

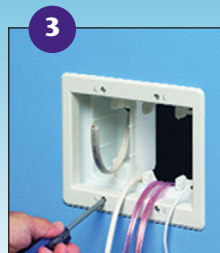

Tighten mounting wing screws to pull the box securely against the wall board. See Photo B.



TVBU505 with power in one side; low voltage in the other. CED13 (page L-11) used to secure wall plate to box.