
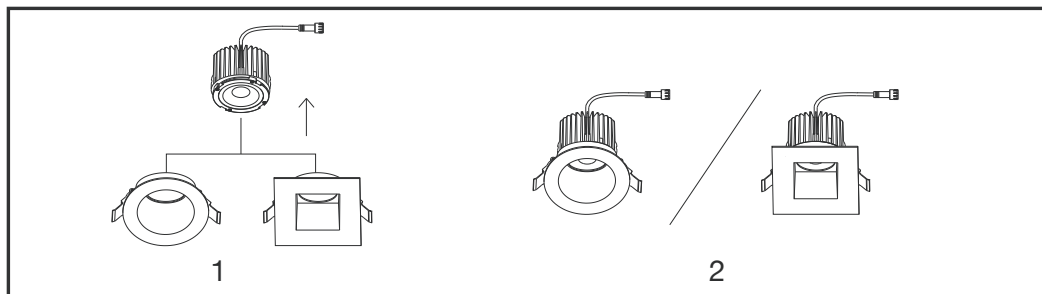
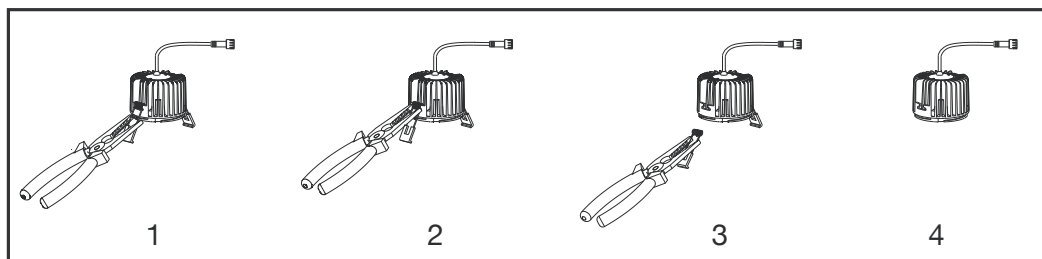


SLOPED TRIM INSTALLATION

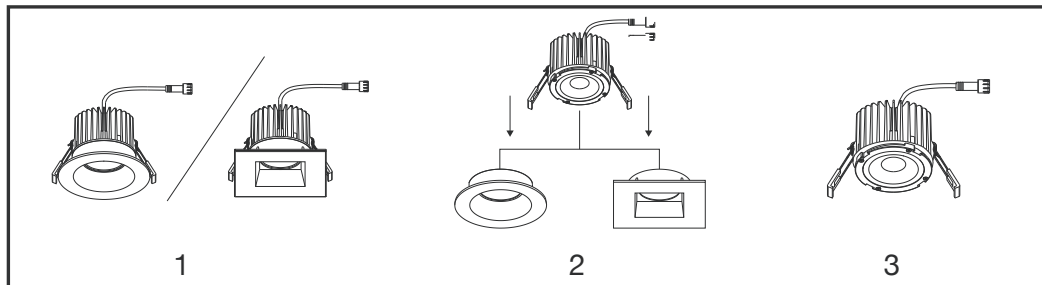

IMPORTANT

When installing a sloped-ceiling trim, you must remove the factory spring clips attached to the heat sink before proceeding. Sloped trims rely on their own mounting system; leaving the original clips on the module creates physical clearance issues that stop the fixture from seating properly, resulting in visible trim gaps, poor thermal alignment, or complete installation failure.

Step 1: Take off original trim by rotating.

Step 2: Remove both spring clips from heat-sink with pliers. Easy to remove, no special tools needed.

Step 3: Align sloped trim, rotate to lock. Complete.