

Hubbell-RACO catalog #s 977, 8977, 8977-5 (GRIP-LOC)


Installation Instructions

Use with switch boxes that have plaster ears.

For use with new construction and remodeling projects.

Installation Instruction:

- Disconnect all power sources.
- Trace outline of the box onto the drywall with a marker and saw an opening. Opening should be slightly larger than the box.
- Break the GRIP-LOK into two pieces (Picture 1).
- Insert box with plaster ears into the opening in the drywall.
- While pushing the box against the drywall, insert in the direction of the arrow on GRIP-LOK between the box and drywall.(Picture 2)
- Pull up, pivot the remaining portion of the GRIP-LOK into the gap, and push down. Pull 90 degree tabs towards you until snug.
- Bend both tabs into the switch box. (Picture 3)
- Repeat other side in same manner.
- Back side after installation should look like Picture 4 and not have any movement. This is for clarification only and you may not have access to see this.

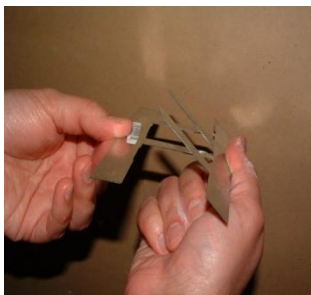

Picture 1



Picture 2



Picture 3.



Picture 4.